

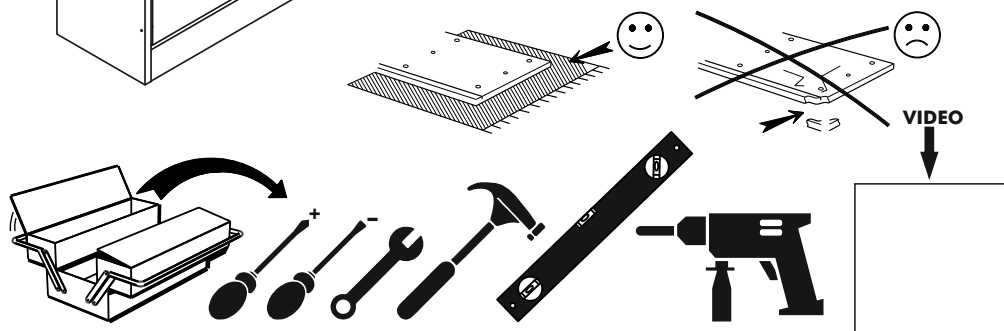
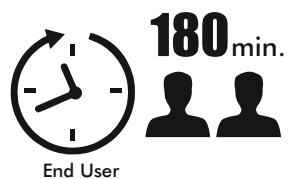


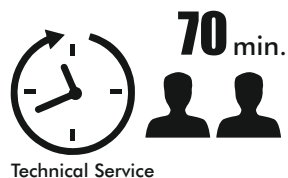













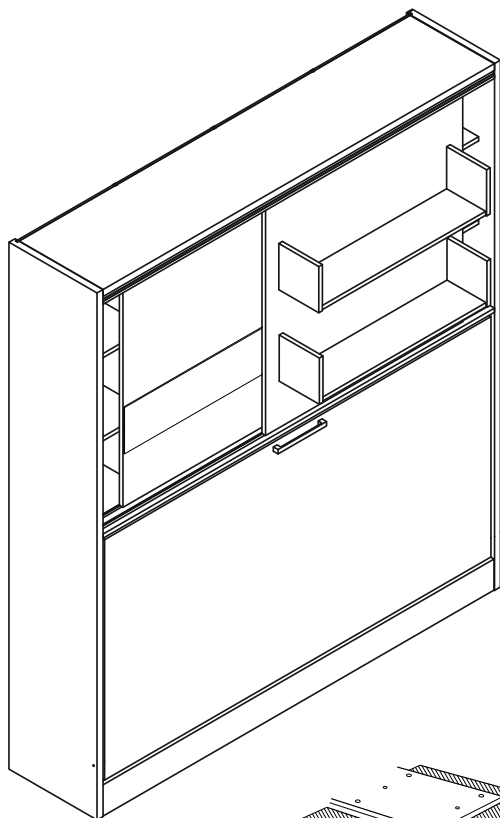










MULTIMO


A 214- PARETE LETTO




Track Title	Piece	(inch)			(mm)			
		Thickness	Length	Width	Piece	Thick	Height	Most
A		1,18	77,01	16,54	1	30	1956	420
B		0,71	77,01	16,54	1	18	1956	420
C		0,71	77,01	16,54	1	18	1956	420
D		1,18	89,76	17,32	2	30	2280	440
E		0,31	89,41	19,37	4	8	2271	492
F		0,71	11,81	12,99	4	18	300	330
G		0,71	40,47	13,15	2	18	1028	334
H		0,71	40,47	13,15	1	18	1028	334
K		0,71	25,59	4,65	4	18	650	118
L		0,71	46,69	4,72	1	18	1186	120
L-R / L-L		0,71	46,69	4,72	2	18	1186	120
M		0,71	32,28	7,68	2	18	820	195
N		0,71	7,87	7,87	4	18	200	200
P		0,71	77,01	5,31	1	18	1956	135
R-1		0,71	38,82	38,82	1	18	986	986
R-2		0,71	38,82	38,82	1	18	986	986
S		0,71	75,98	40,94	1	18	1930	1040

Accessories List

MNG - 01  42 / piece	MNX 02  42 / piece	KVL 01  64 / piece	TAP - 01  42 / piece
DSE - 01 (40x90x32) mm  3 / piece	TFC - 01(8x70) mm  3 / piece	DD - 01 (R12)  3 / piece	OT-054  2/ piece
IM - 01 (6x30) mm  4 / piece	VTB - 01 (4,8x16) mm  12 / piece	VKP - 01 (22) mm  2 / piece	CT - 01 (6x40) mm  2 / piece
STP - 01  4 / piece	VDA - 01 (6,5x50) mm  6 / piece	VD - 03 (3,5x18) mm  8 / piece	VD - 02 (3,5x25) mm  28 / piece
AVT - 01  8 / piece	AF - 01  4 / piece	KP - 01 (224) mm  1 / piece	BO - 01  2 / piece
SC-61  2 / piece	H 01  3 / piece	PM - 01  16 / piece	PL - 02 (8x22x1) mm  3 / piece
MKZ - 02  2 / piece	TTC 01  4 / piece	KMT-01  1 / piece	VTB - 02 (4,2x16) mm  8 / piece
KLF 02 (fabric cover)  1 / piece	KOR 02  1 / piece	YSB - 02 (4x20) mm  4 / piece	KBP - 01  2 / piece
KKS - 01  2 / piece	AL - 01 (4MM)  1 / piece	AL - 02 (5MM)  1 / piece	

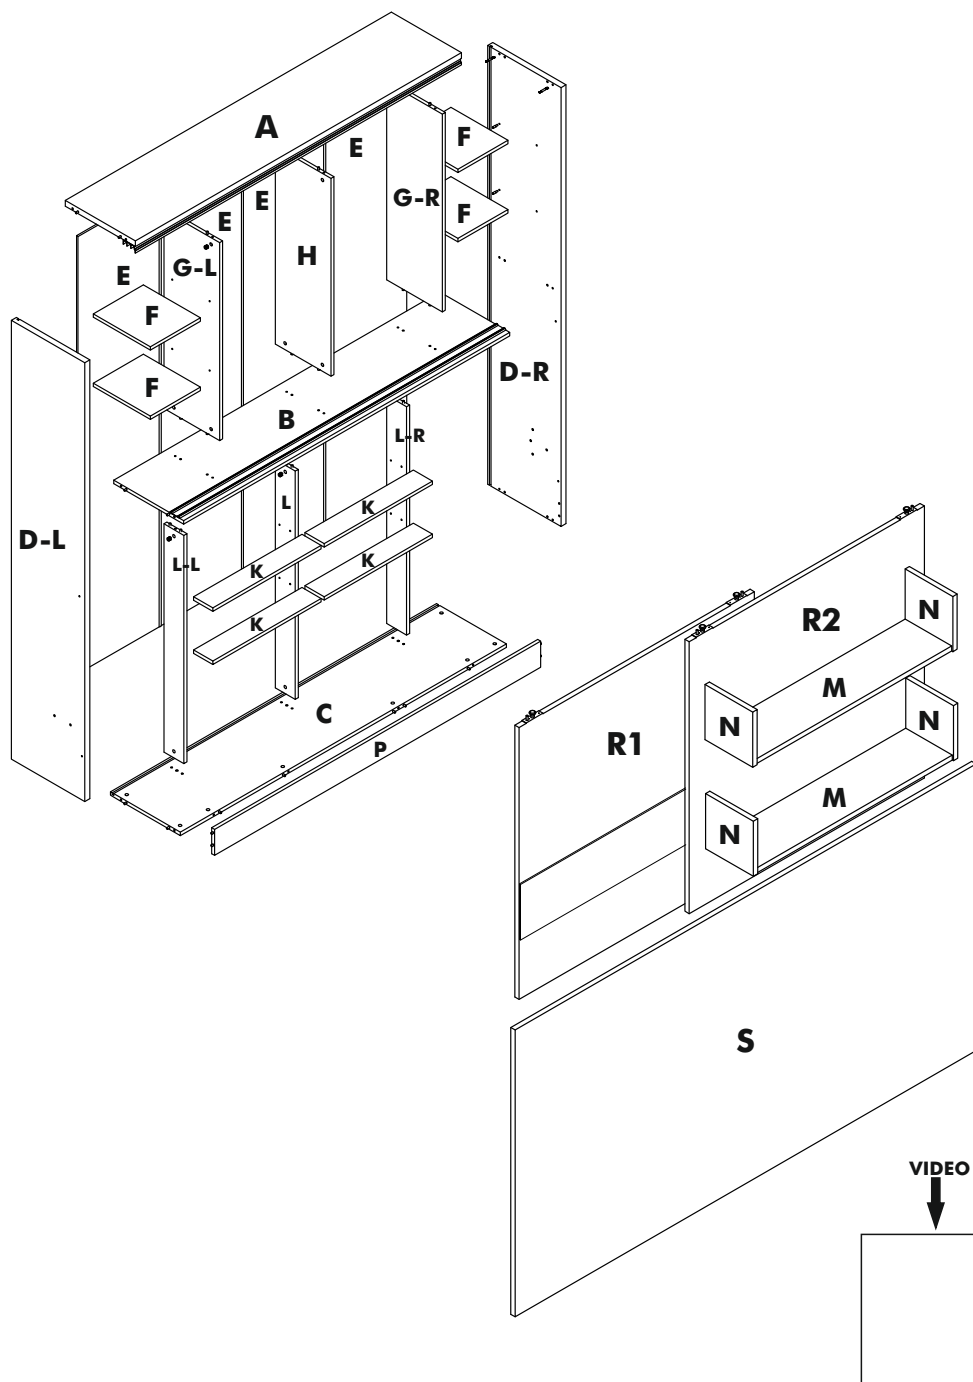


VIDEO

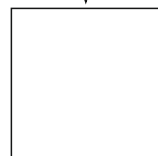
link

STEP 1

Rail should be disconnected before tighten MNX
After tighten MNX (STEP 11) rail can be connected

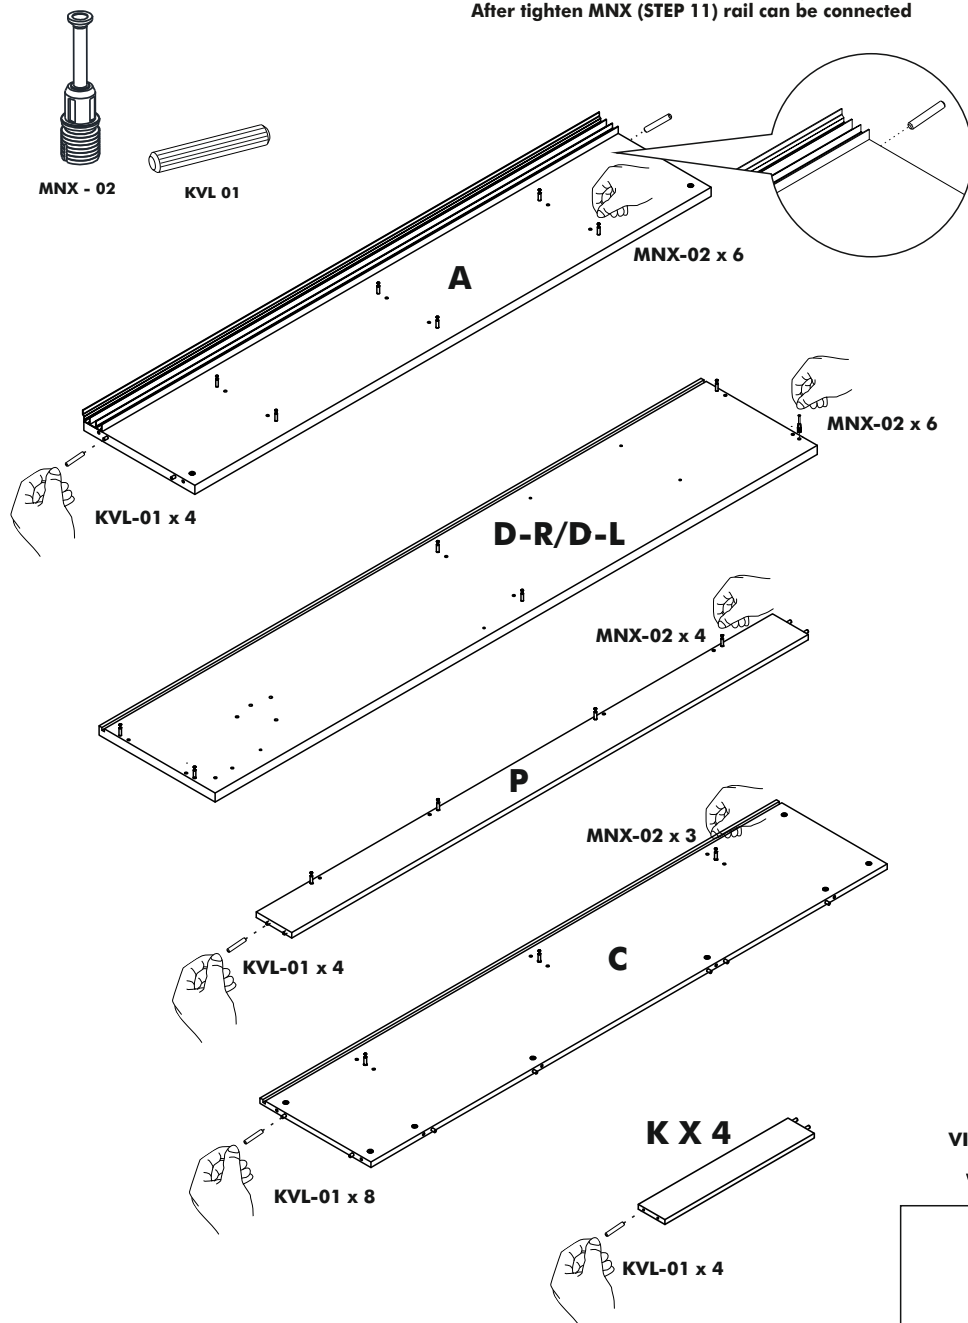


VIDEO

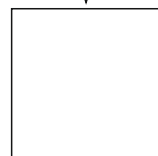


link

STEP 2

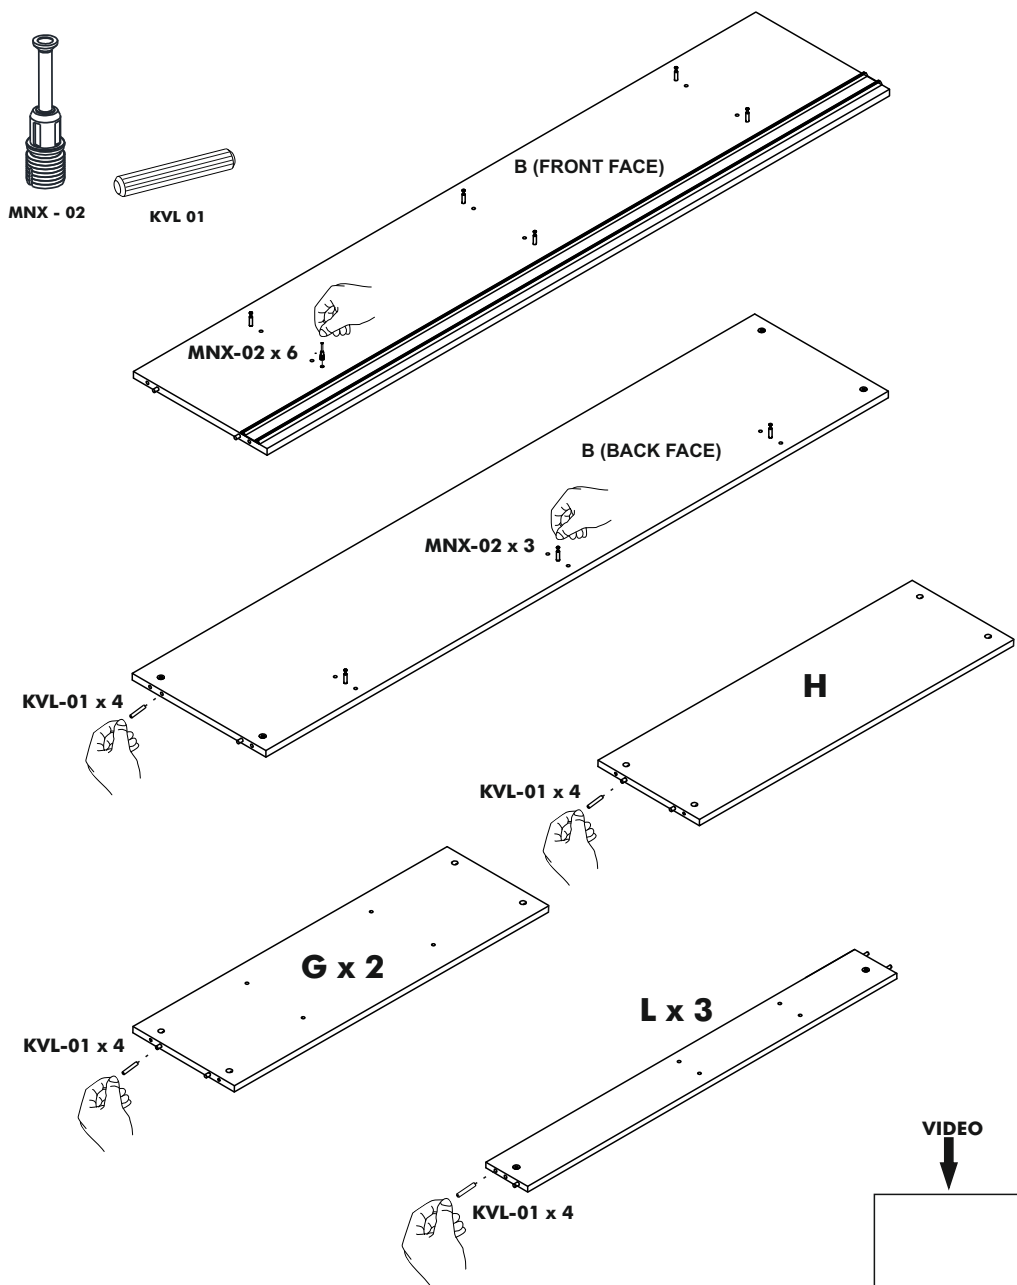


VIDEO

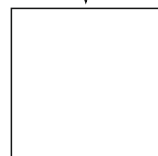


link


STEP 3

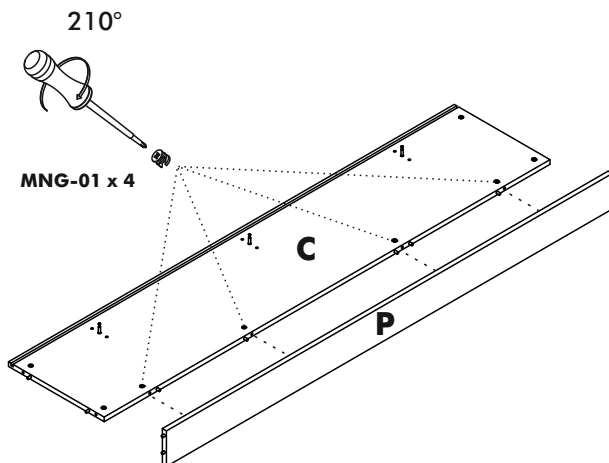

STEP 4

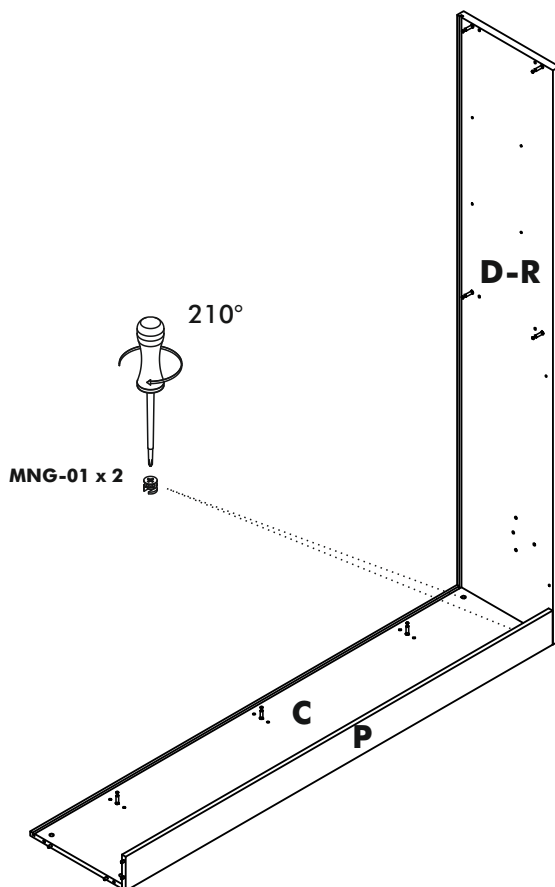

VIDEO

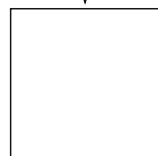


link


STEP 5



MNG - 01

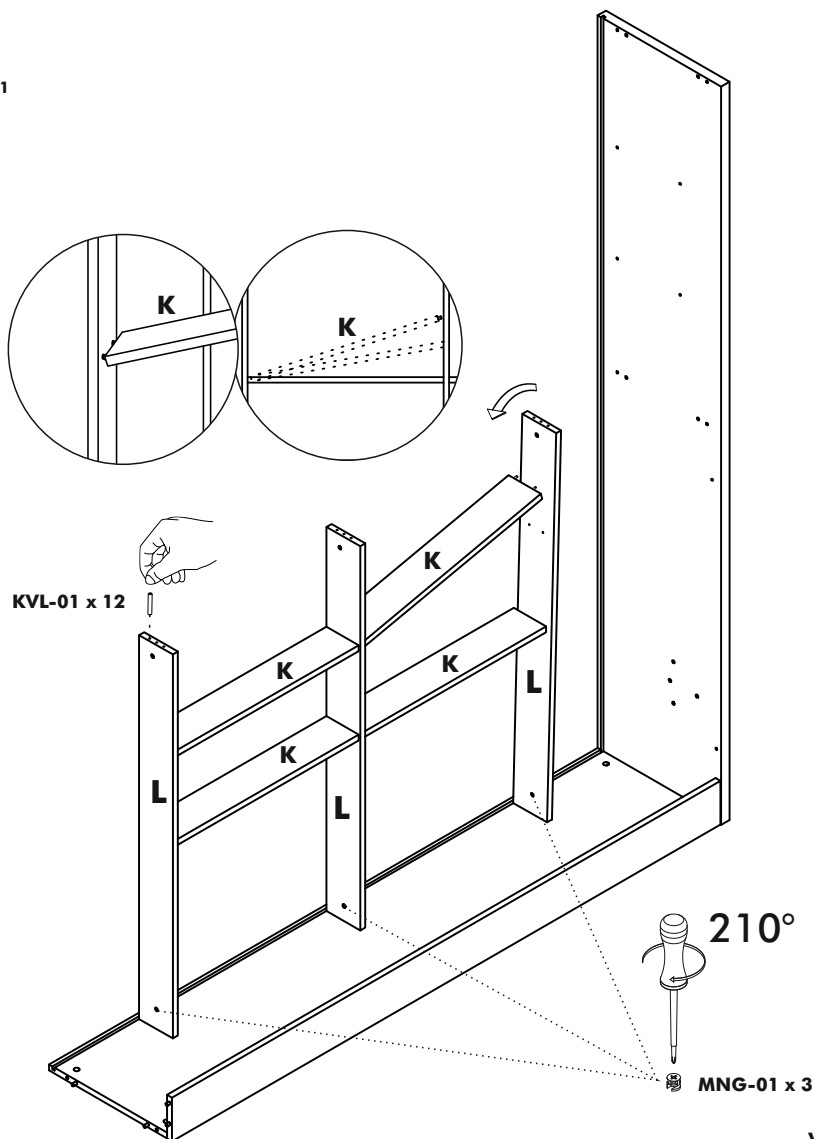

VIDEO

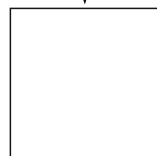


link


STEP 6



MNG - 01

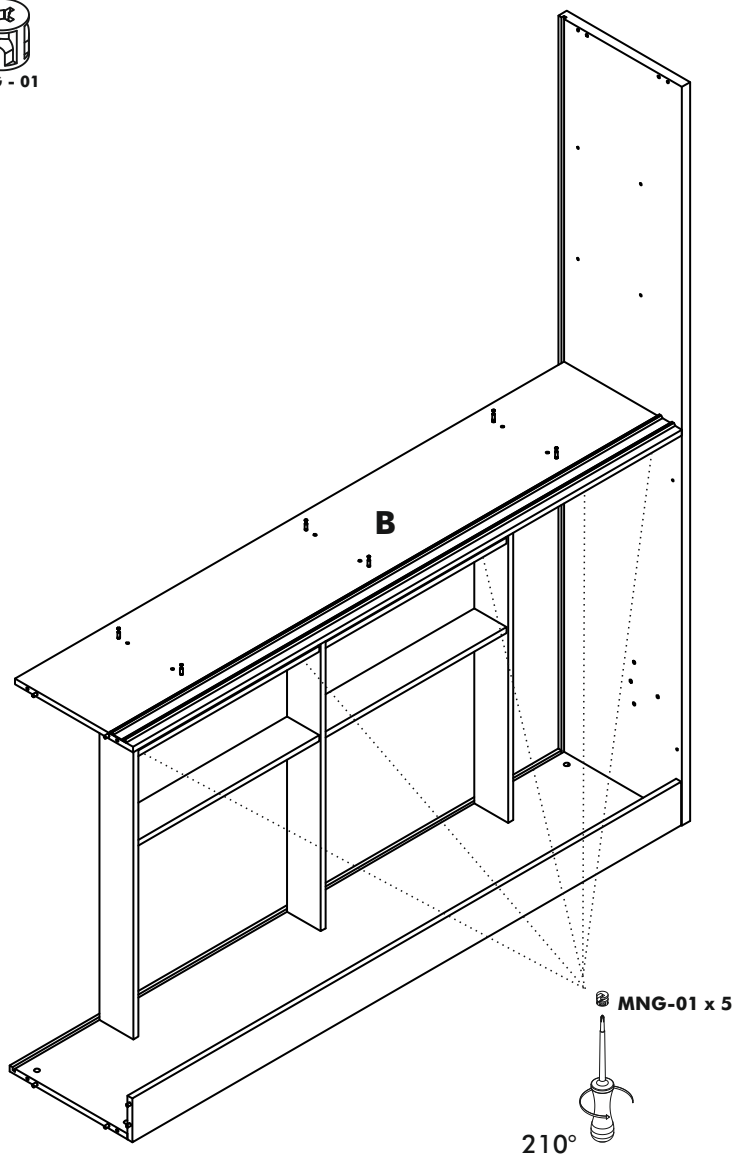

VIDEO

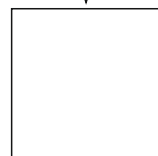


link

STEP 7




MNG - 01

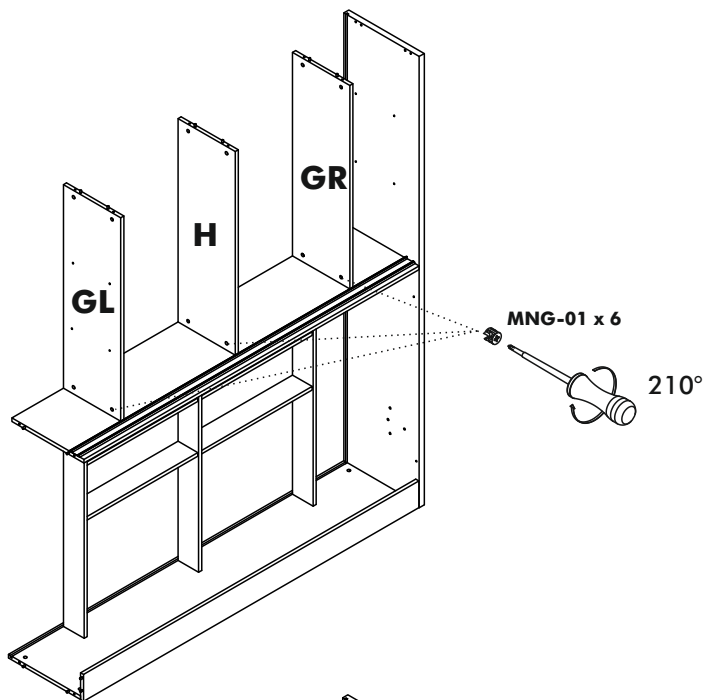


STEP 8



MNG - 01

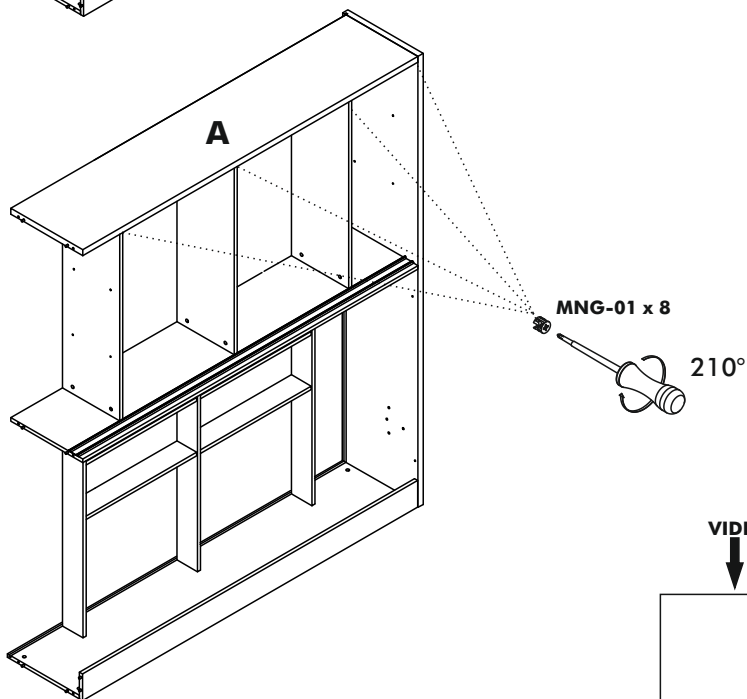


VIDEO

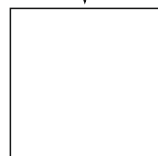


link

STEP 9

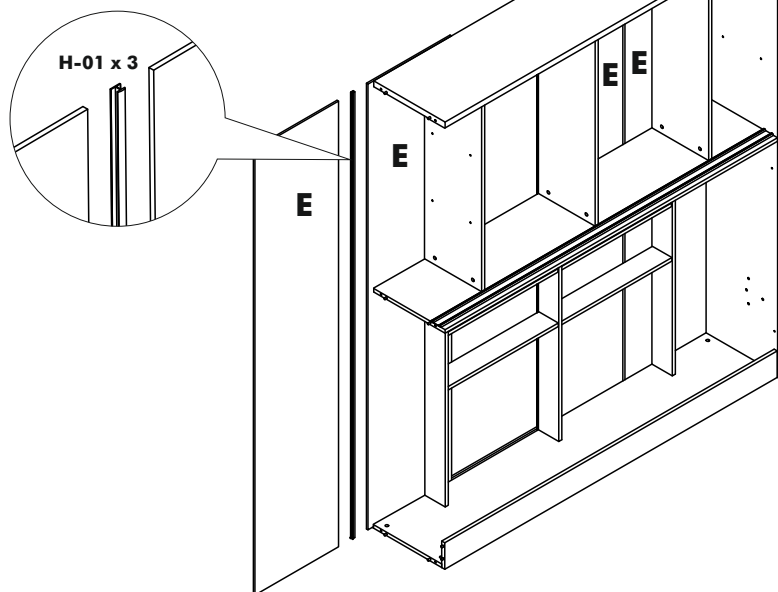

STEP 10

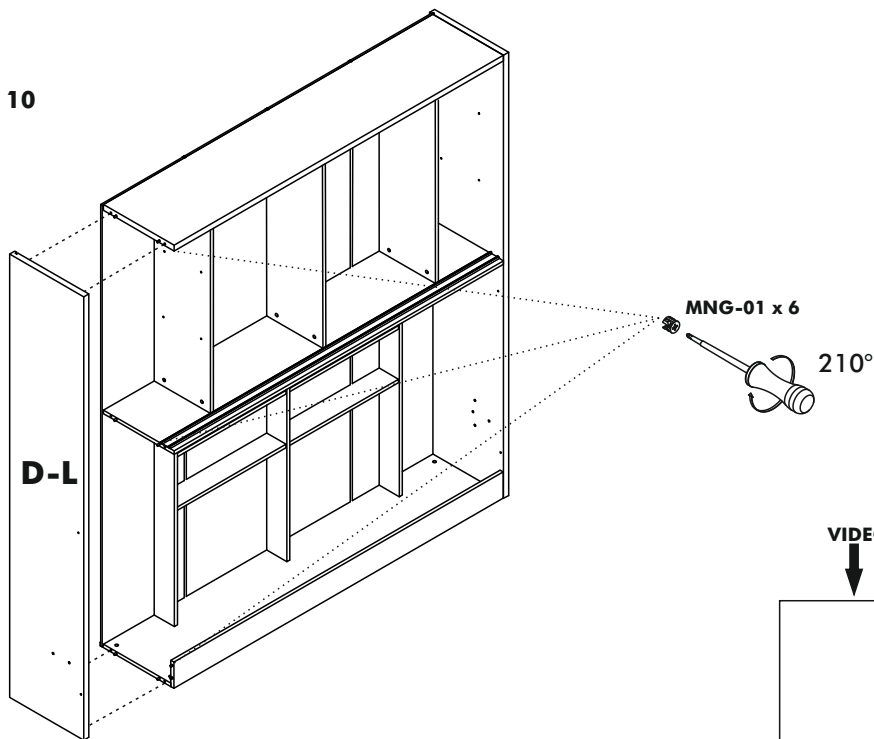


STEP 11





SPT - 01

SPT-01



SPT-01

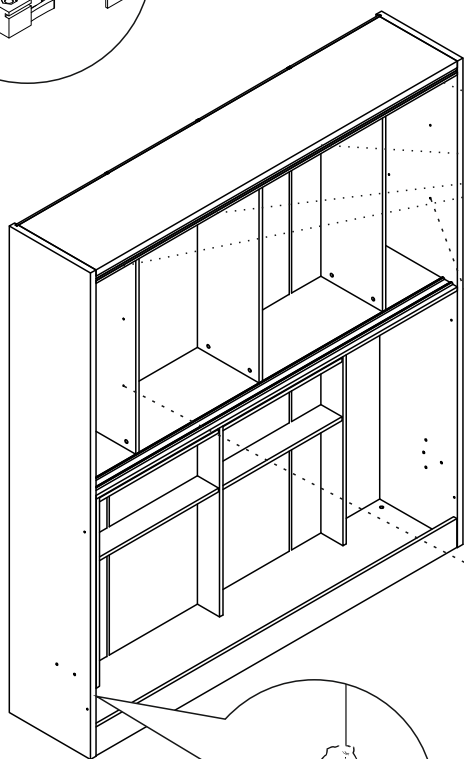


PM - 01 x 16



TAP - 01




VIDEO

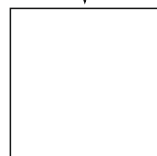



link

STEP 12

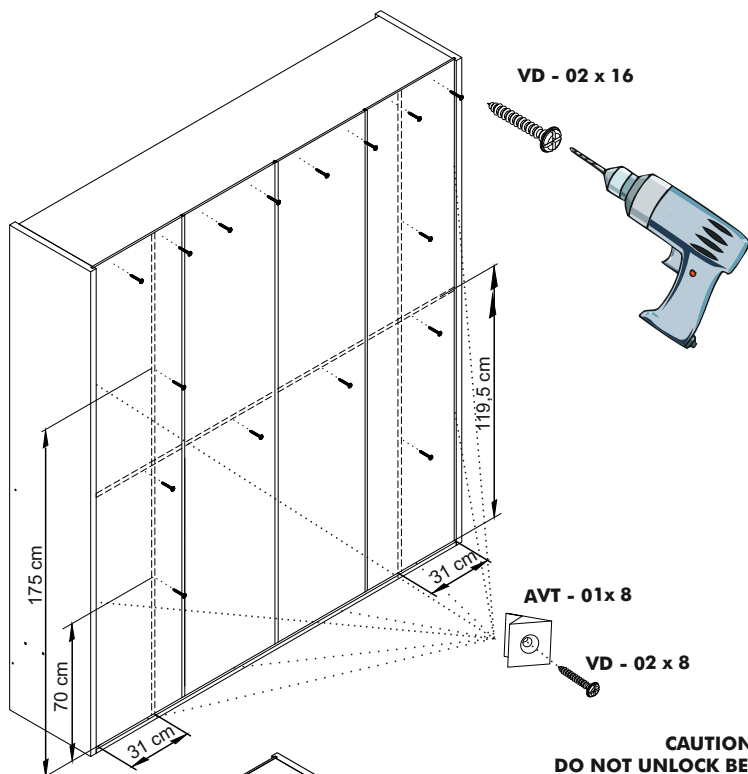

CAUTION
DO NOT UNLOCK BEFORE INSTALL

STEP 13

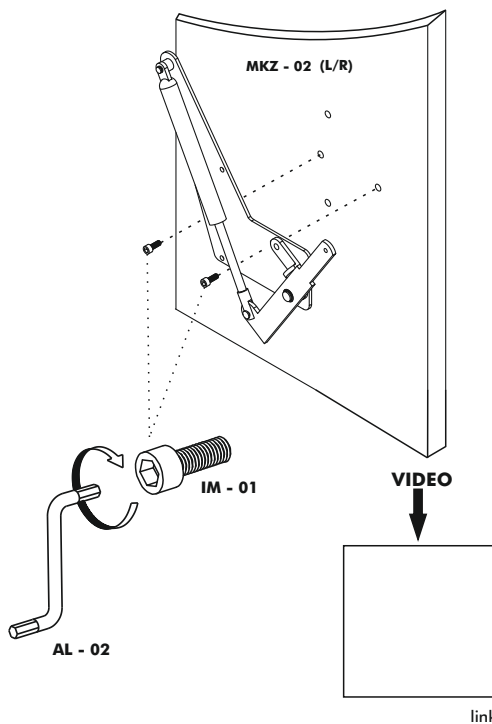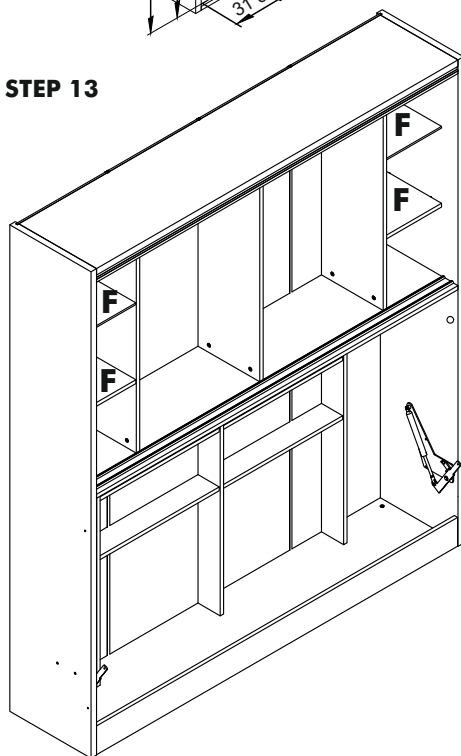





ATTENTION!!!

STEP 14

Must be secured to the wall made of brick, concrete or similarly strong material.
Mounting to wooden or metal studs is also acceptable.
Do not mount directly to sheetrock or paper-mache type walls not supported by studs.

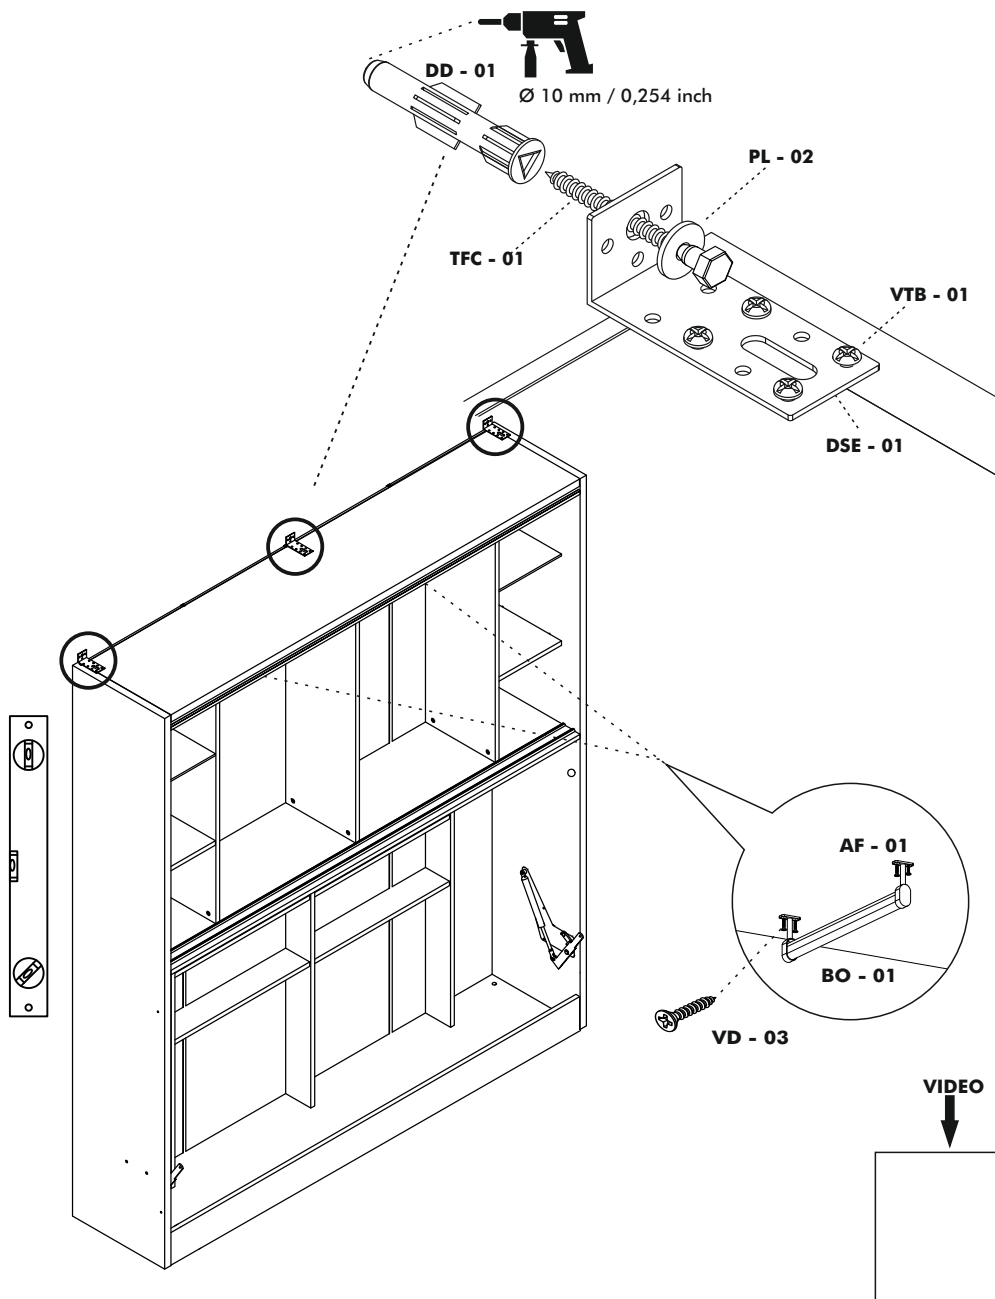

STEP 14-1

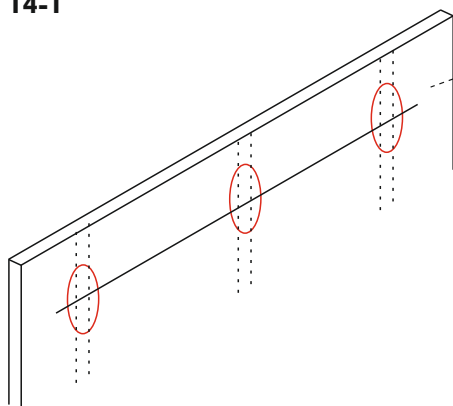

Ø 10 mm / 0,254 inc




FIRST LOCATE THE STUDS BY USING "STUD FINDER" IN THE WALL AND DRILL IT ACCORDING TO THE HEIGHT MEASUREMENTS GIVEN ON THE SIDE.
UPPER HOLES SHOULD BE DRILLED FOR ATTACHING BED AT NEXT STEP.



DD - 01

Ø 10 mm / 0,254 inch

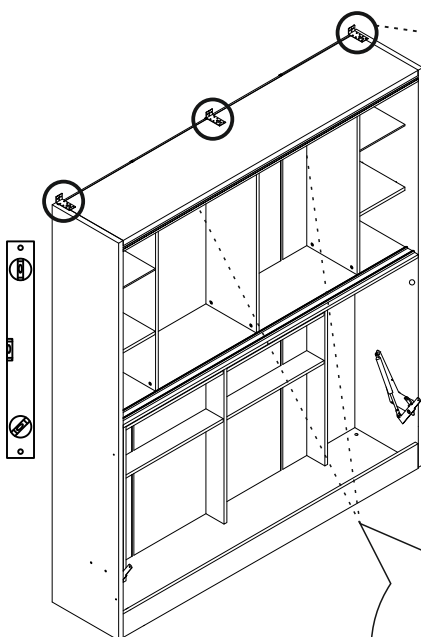

TFC - 01

PL - 02

VTB - 01

DSE - 01

NOT INCLUDED

SUPPLY DRYWALL FASTENERS APPROPRIATE TO YOUR WALL TYPE. WE RECOMMEND USING STEEL TOGGLE BOLT ANCHOR THAT SHOWN BELOW




AF - 01



BO - 01

VD - 03


STEP 15

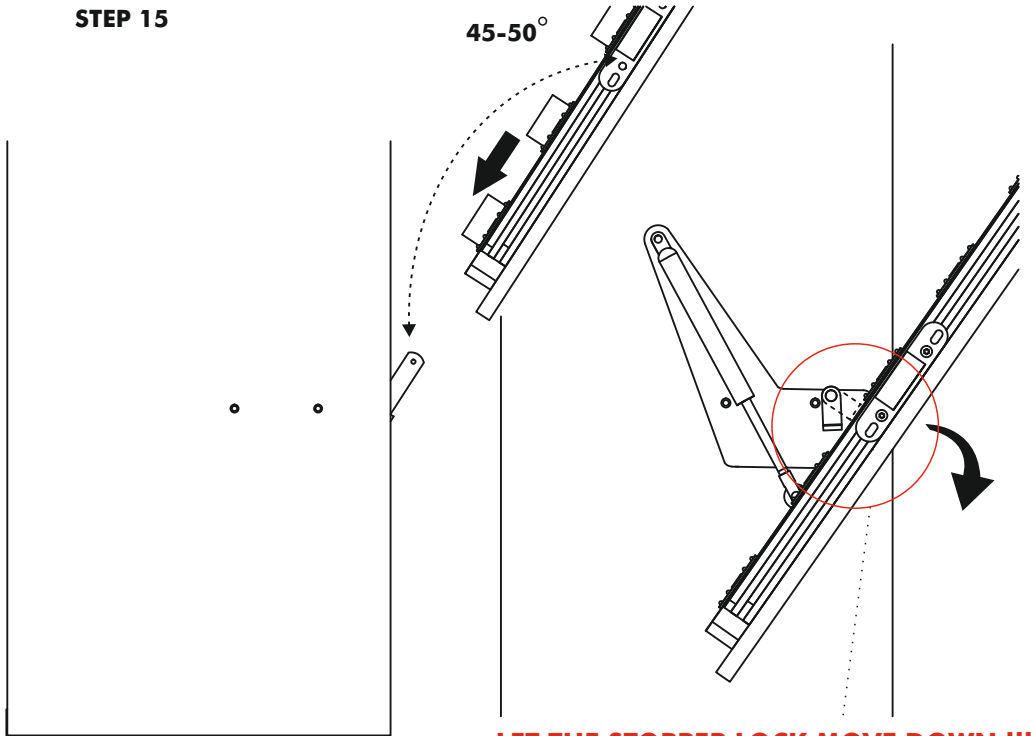

LET THE STOPPER LOCK MOVE DOWN !!!

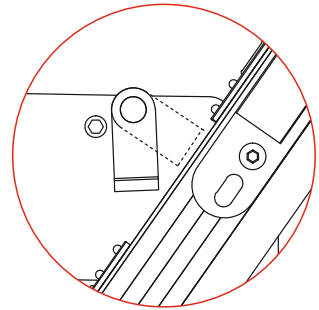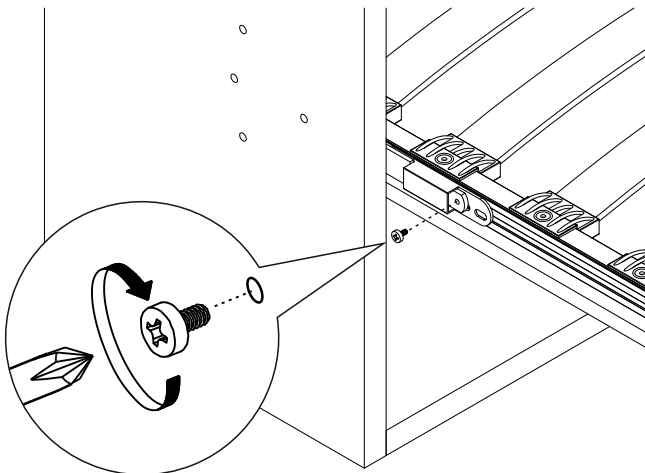


VIDEO




link






STEP 16

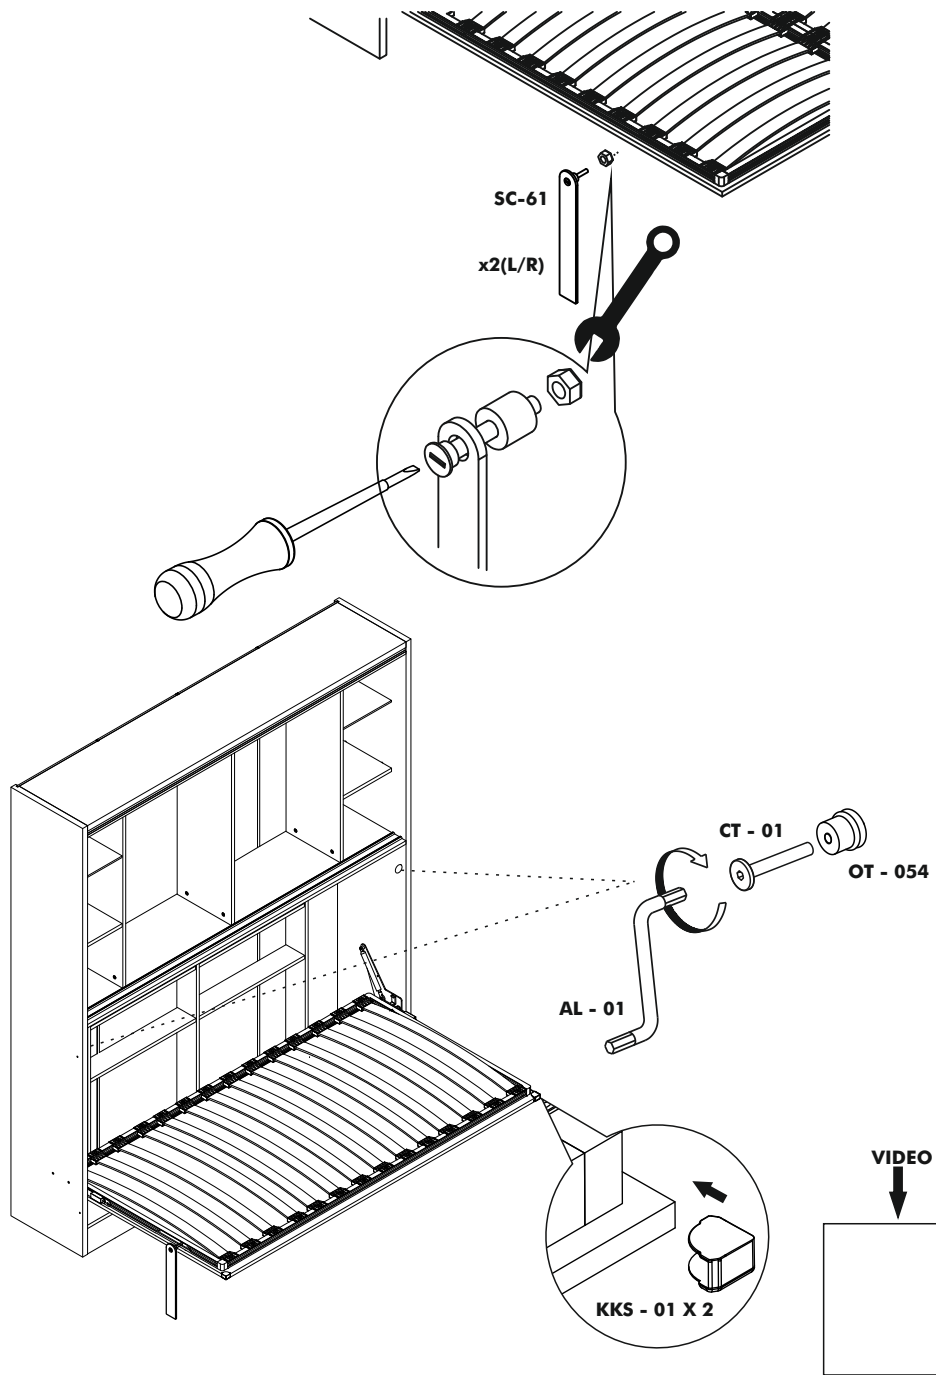


STEP 17

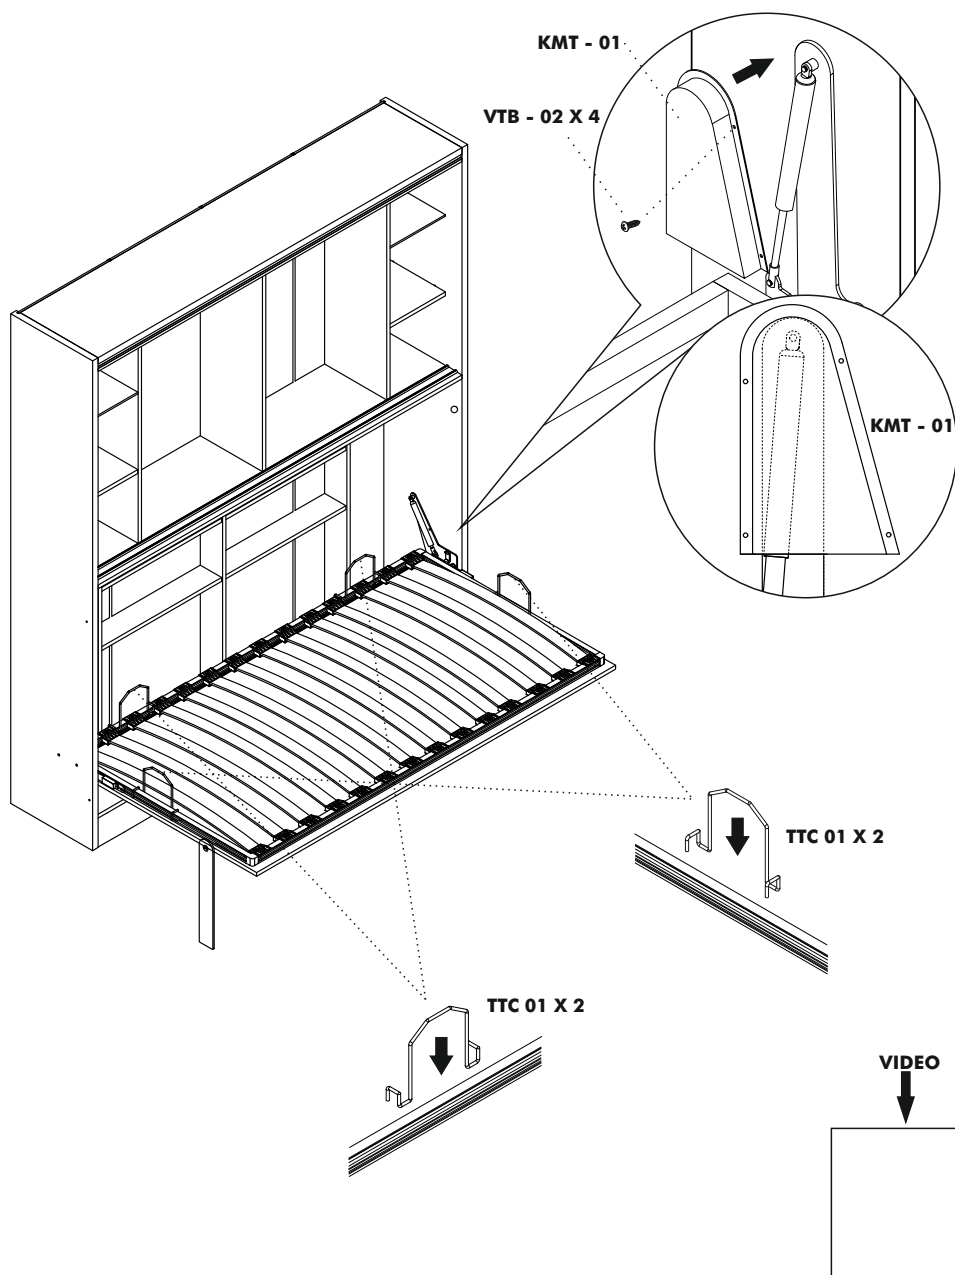


STEP 18

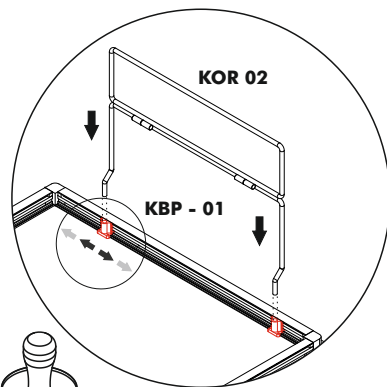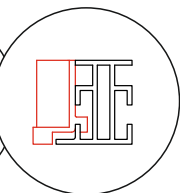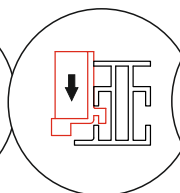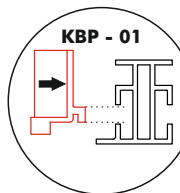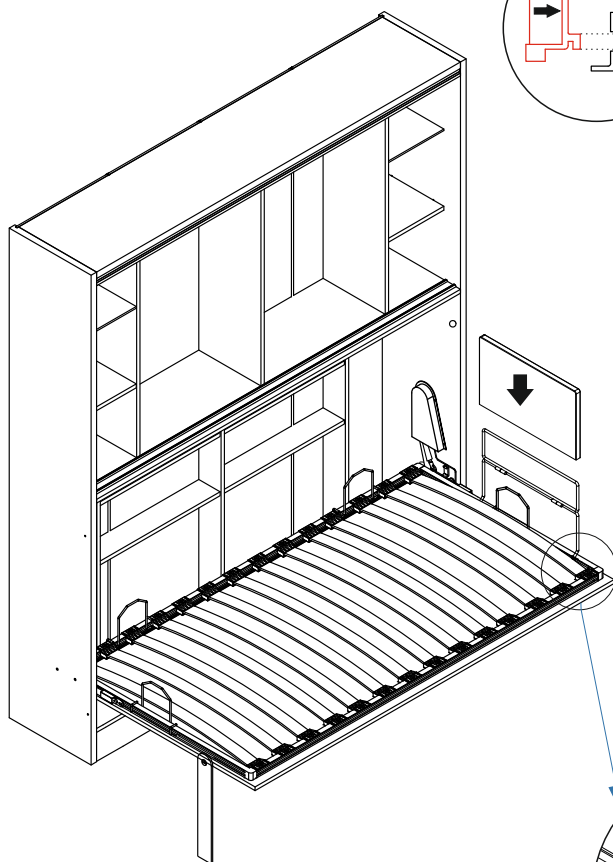


YSB - 02 X 2

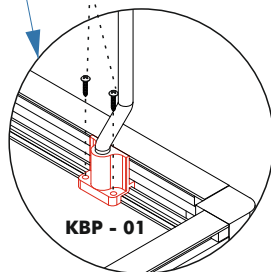

CAUTION !
MAKE SURE THAT HEADBOARDS
AND GUARDRAILS ARE FOLDED
BEFORE CLOSING THE BED

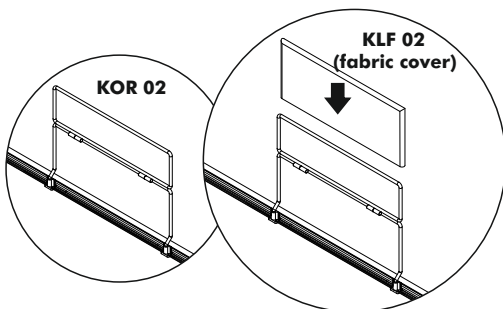


VIDEO




link




STEP 19

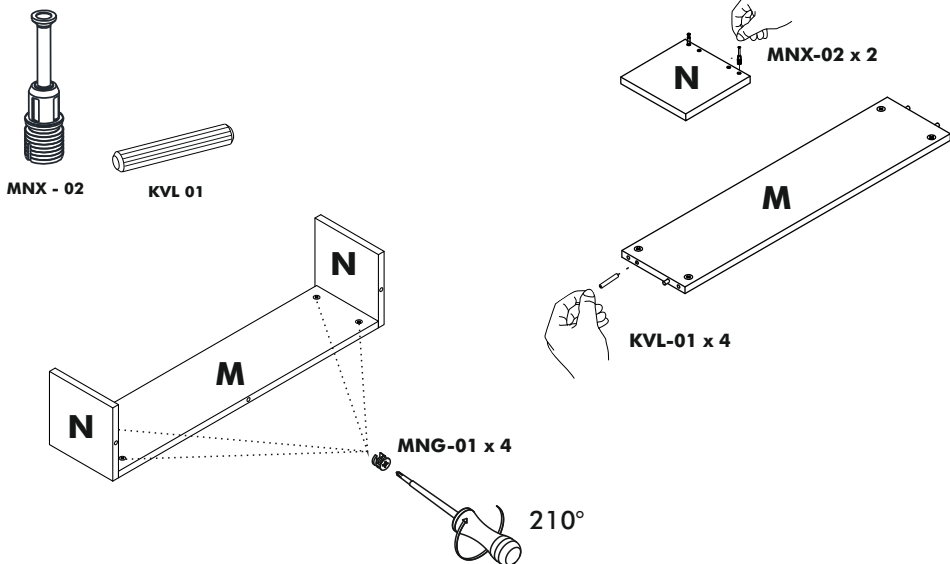




STEP 20

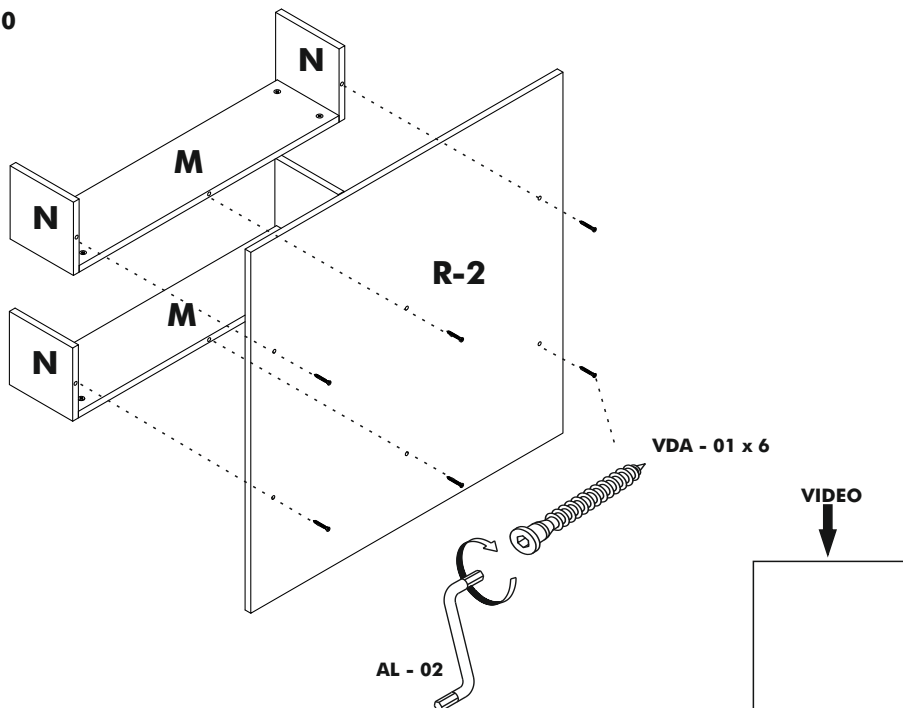


STEP 21

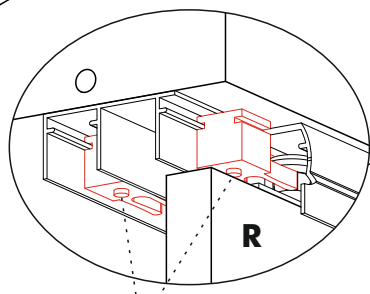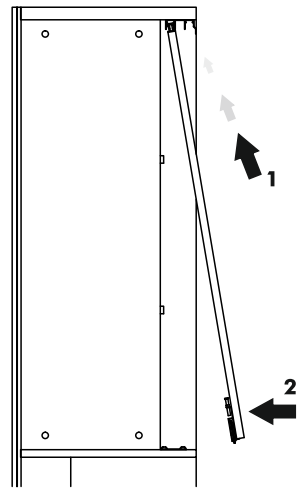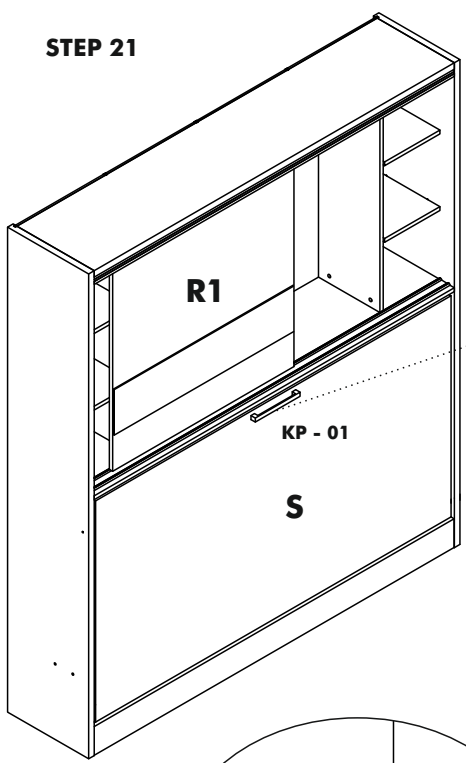




SPT-01

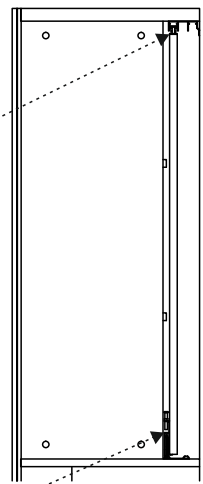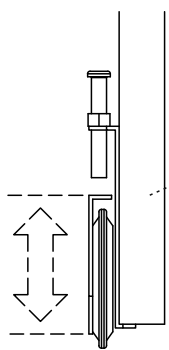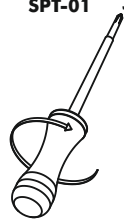



VIDEO

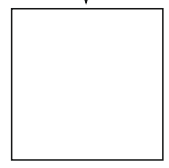


STEP 22

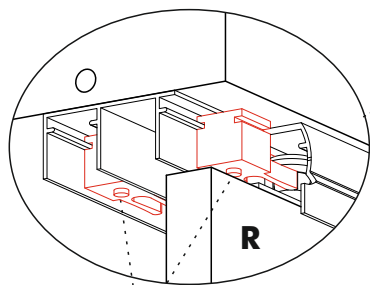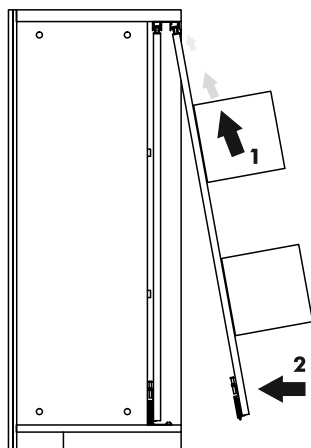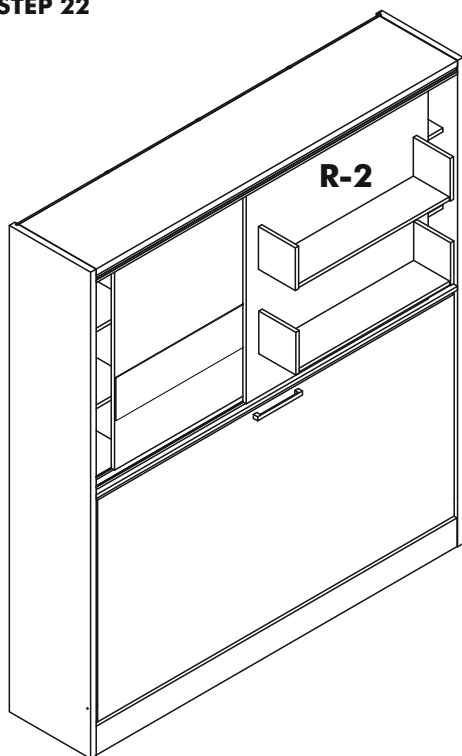

SPT-01

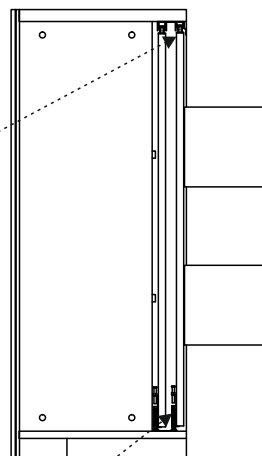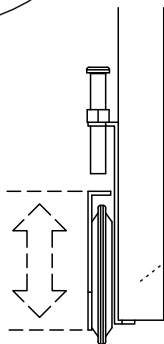

VIDEO

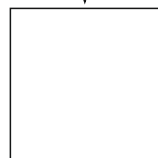

1. Wall beds must be securely attached to the wall. Hardware for mounting to concrete, brick or similar strong material is included.
2. When mounting to drywall, wall beds must be attached to wooden or metal studs in 2 or 3 points. Do not mount wall beds directly to drywall or paper-mache type wall without properly attaching it to studs. Please choose appropriate fasteners for the type of wall the bed will be mounted on. Drywall mounting hardware is not included.
3. For safety and product longevity you must periodically inspect the integrity and tightness of the mounting and mechanical connections. Confirm hardware remains properly affixed and connections are snug.
4. Do not lean or rest heavy objects on sides or top of furniture. This may cause balance issues and compromise the integrity of your mounting connections.
5. Please use wall beds and integrated shelves, desks and sofas as intended. Do not jump and/or exceed supported weight limits. Do not sit or lean on integrated shelves and desks. Improper use may cause personal injury and damage to property.
6. With seasonal humidity change please inspect the interior and exterior of the furniture for deformation and/or discoloration.
7. Before any un-mounting or disassembly please contact Multimo Beds for technical support and instructions. Failure to properly detach may result in personal injury and damage to property.



WARNINGS

IMPORTANT! HAZARD WARNING!

All Wall Beds contain sophisticated and powerful lifting mechanism.
Failure to follow assembly and installation instructions may result in **severe personal injury and damage of the product.**

SECURE RIGIDLY TO A WALL!

Improper attaching wall bed to a wall will create a tip-over hazard and may result in severe personal injury or even death.
ONLY qualified installers should install or remove a wall bed.



WARRANTY

RETAIL RESIDENTIAL TERM

Lifetime guarantee on hardware.
5 year structural guarantee on cabinetry.

COMMERCIAL TERM

Lifetime guarantee on hardware.
2 year structural guarantee on cabinetry.



www.multimobeds.com